

User Manual for the Panasonic A100

Region Switch

As a special feature, the modification deactivates the players region comparison routine. As some disks are testing the region themselves, the region has to be entered manually before playing the disk in these cases.

Turn on your player, make sure it is not playing a disk, press [SETUP], [2] for Audio, then [SEL.], go to OTHER with the arrow keys and enter a *command*. Confirm with [SELECT], turn off (wait until it completely turned off) and on your player by pressing [POWER] twice.

Available *commands* are:

Region 0	0100
Region 1	0101
Region 2	0102
Region 3	0103
Region 4	0104

PAL/50 as	NTSC/60 as	Macrovision		
PAL/50	PAL/60	disabled	pseudo PAL	0200
PAL/50	NTSC/60	disabled	player default	0201

Advanced fatures:

Macrovision default	0300
Macrovision off	0301
CGMS default	0400
CGMS off	0401
Blanking default	0500
Blanking 0.0 IRE	0501
Blanking 7.5 IRE	0502

Mounting the Region switch in the Panasonic A100

Wire #	Wire Color	Illustration #	IC Pin #
1	red/rot	1	1
2	orange/orange	2	2
3	yellow/gelb	3	3
4	green/grün	5	5
5	blue/blau	6	6
6	purple/violet	8	8

